


Debut Carbon EVO Setup Guide

Getting started:

- Make sure to have enough space to unpack your turntable.
- Always unpack and setup in a clean environment.
- Please Do **NOT** throw away the packaging! If you need a service or want to return your product, please send them in the original packaging including all inserts. In case of any damage in another packaging your dealer cannot guarantee a full refund.
- complete manual: www.project-audio.com/en/product/debut-carbon-evo

1 Unpack all items from accessory bag.

- a) Anti Skating Weight
- b) Adapter for 7" singles
- c) Connect it E RCA cable
- d) Round belt for 78 RPM
- e) Standard flat belt for 33/45 RPM

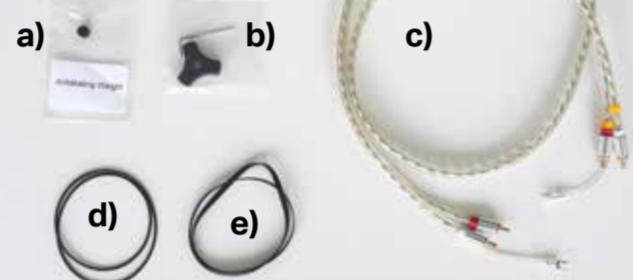

2 Remove dust cover carton from the box.



3 Lift the wrapped turntable out of the box.



4 Carefully remove the protection covering.



5 Unpack the counterweight.



6 Unpack the power supply.



7 Unpack the platter.



8 Put the drive belt on the pulley and sub-platter.



9 Put the platter on the turntable.



10 Use the rocker switch to select the playback speed.



11 The turntable should always be placed on a flat surface. Check with a spirit level.



12 If necessary, level the turntable by adjusting the feet.



13 Remove tonearm twist tie.



14 Put the counterweight in place.



15 Remove the needle protection cover.



16 Put a record on the platter.



17 Place the tonearm between platter and armrest.



18 Balance the tonearm so it stays level by turning the counterweight forwards and backwards on the rod.



19 Turn the front dial of the counterweight (not the whole weight) so the '0' is in line with marker at the back of the tonearm.



20 Turn the whole counterweight counter-clockwise until the scale reads 18 - 20.



21 Put the loop of the Anti Skating Weight in the second groove on the tonearm post.



22 Unpack Dust Cover and put it on the turntable.



23 Connect to your hifi-system and enjoy your music!

